

FITTING INSTRUCTIONS


Battery Tray Details

Fits up to N70zz 12 inch case battery or up to 120AH size 4x4 battery.

Comes with: 6 x 6mm bolts, 3 x 4mm bolts, 1 x battery hold down with J hooks.

VEHICLE Colorado / D-Max / Rodeo MODEL YEAR 2007 - onwards PRODUCT Auxiliary battery box PRODUCT CODE 025 B

- 1. Assemble the bottom plate using 3 x 6mm bolts & nuts and place battery tray into desired position.
- 2. Mark holes and drill being careful not to drill into the tyre, and then tighten 3 x 6mm bolts into place.

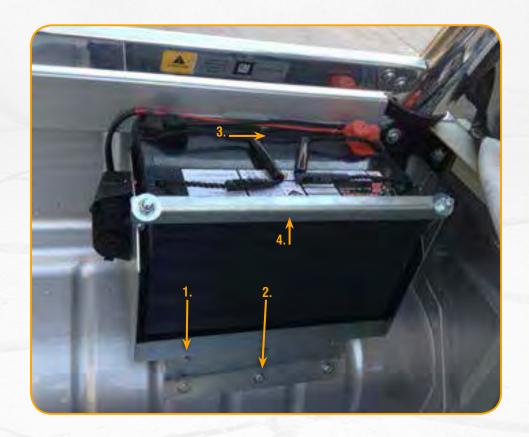

- Mark and drill the 3 top holes and tighten 3 x 4mm bolts into place with backing plate behind the lip of the tub.
- 4. Sit battery into tray and place battery hold down on the top inner corner of the battery, put J hooks into the corner holes in the battery tray and through the hold down, then tighten until battery is firmly in place.